

# Tec Line

Operating Instructions for models  
SP1361, SP1368-660, SP1368-680  
SP1311, SP1318-660, SP1318-680



## Seat Height Adjustment

Provides greater comfort and support for individual height and working conditions.

To Adjust:

Pick up the paddle on the right side of the seat.




## Mechanical Backrest Angle Adjustment

Angle of backrest can be adjusted for individual user requirements.

To Adjust:

Pull the lever back and move back forward or backward

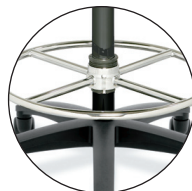

## Height Adjustable Footring

Footring provides greater support and can be adjusted to the height of user.

To Adjust:

Hold the base with one hand and turn the footring counter-clockwise to loosen. Hold the bottom of the plastic hub with one hand and the outer ring with the other and continue to turn counter clockwise until the footring is released and can freely move up and down the cylinder. Adjust height as required and then tighten.